



Rev1

Part Description

Part #: OLM15WRX6MTTRIM-CF & OLM15WRX6MTTRIMCFL

Application: 2015-2021 WRX

Questions? Email us at: sales@subispeed.com

Parts List:

①

①

Required Tools:

Small flathead screwdriver

Phillip's screwdriver

Installation Instructions:

1 – Start by parking your car on a level surface, chock your wheels to prevent it from rolling forward or backward since you'll be doing work to your emergency brake handle

2 – Remove the e-brake boot and attached plastic by pinching the back of the e-brake boot between 2 fingers and pulling straight up, as shown below. This should partially pop the retainer and boot out.




3 – Next, put your hand between the lower seat cushion and the center console and find the bottom of the e-brake boot and plastic trim ring. Pull straight up to release the rest of the clips. The e-brake boot should now be free from the center console.



4 – Now that the e-brake boot is loose move it to the side and remove the one Phillip's screw shown below.



5 – Open the lid to your center console, remove the fabric liner from the bottom and remove the 2 Phillips screws (you can also use a 10mm for these 2 if needed) shown below.

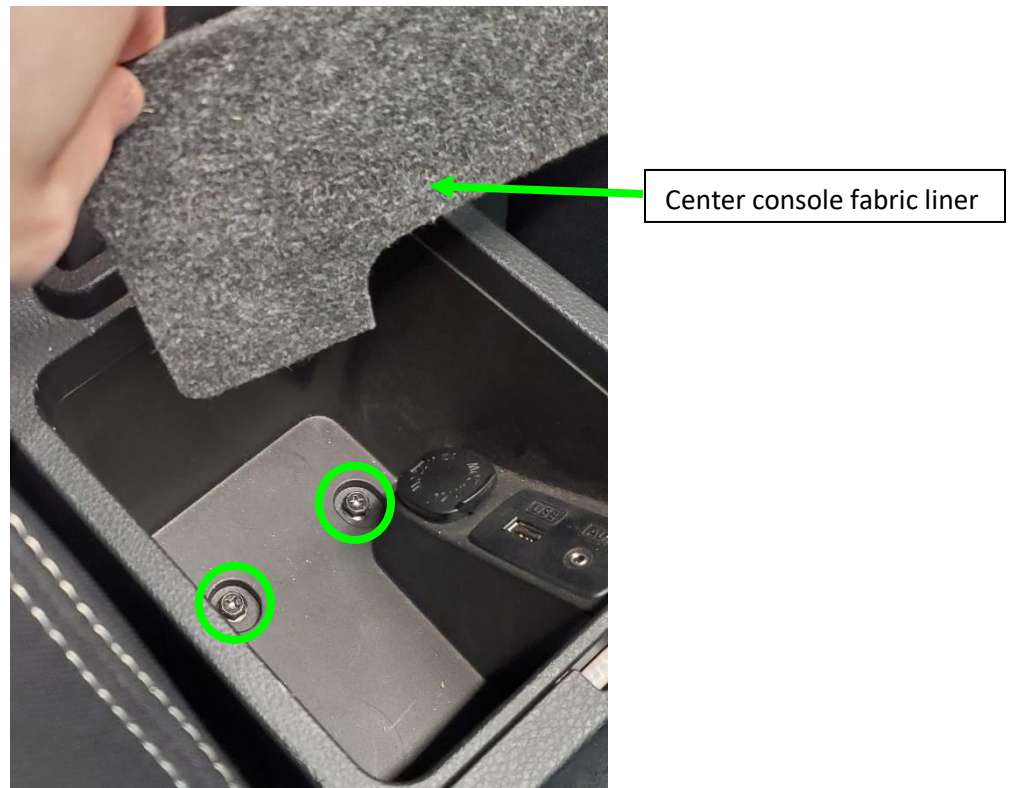

6 – With the center console loose, move it towards the rear of the car, giving you clearance to remove the front center console trim in a later step.

Note: If your vehicle has come equipped with heated seats, take care not to strain the wires when move the center console.

7 – Remove your shift knob by unscrewing it from the shifter.


8 – Next, grab where indicated below and pull straight up unclipping the front center console trim, shifter trim, and shift boot.



9 – Pull forward to fully unclip the front of the front center console trim from the dashboard.



10 – With the trim now free from the dash and transmission tunnel, rotate it to the orientation below to prevent interference with the HVAC controls and then pull straight up, sliding the shift boot up over the reverse lockout lever.

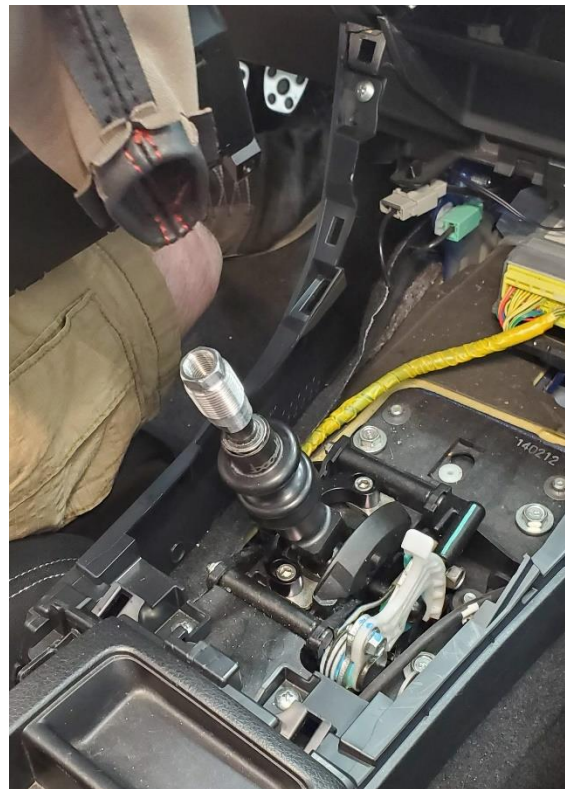

11 – With the trim removed from the car flip it over and gently depress the tabs shown below in green to release the shifter trim and shift boot assembly from the front center console trim.



12 – Next, using a small flat head screwdriver, gently depress the tabs shown above in yellow to release the shift boot from the shifter trim.

13 – Take your new OLM shifter trim and install it onto the shift boot, taking care to seat all the same tabs shown in yellow that you depressed in step 12

14 – Next, take the shifter trim and shift boot assembly and reinstall it into the front center console trim, taking care to seat all the same tabs shown in green that you depressed in step 11

15 – Install the center trim console back into the vehicle and reinstall the center console using steps 1 – 10 in reverse order.

16 – Your install is complete! Enjoy your new OLM shifter trim!