



Rev1

OLM Paint Matched Fog Deletes


Part #: OLMA.70238.1 – MB, K7X, K3X, K1X, D4S, 61K, & M7Y

Application: 2018-2021 WRX & STi

Questions? Email us at: sales@subispeed.com

Parts List:

- ① 18-21 Fog Delete - DS
- ② 18-21 Fog Delete - PS

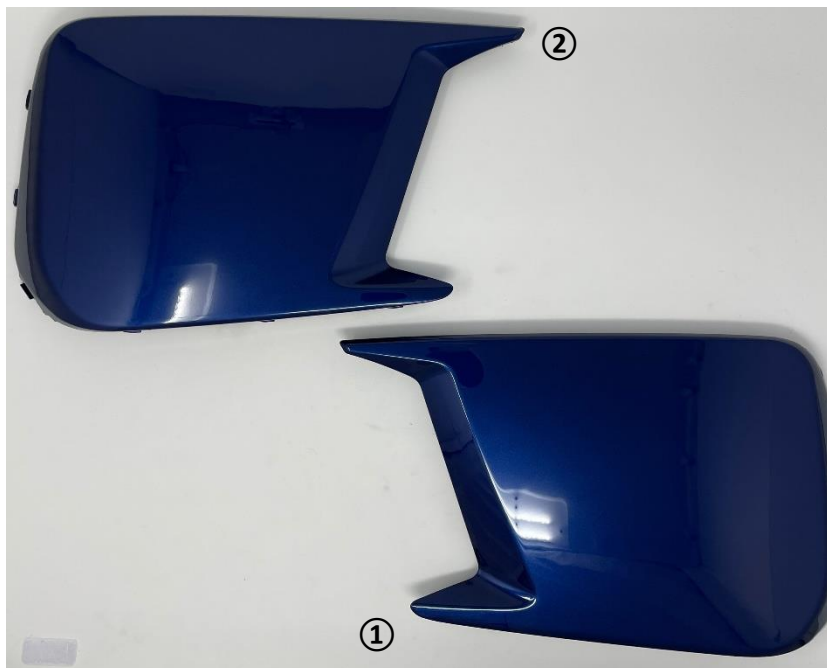

Required Tools:

Flathead screwdriver

3/8" ratchet w/ extension

10 mm socket


Lineman's pliers

Installation Instructions

1 – You'll need access to the underside of your front bumper. Start by parking the vehicle. Set the emergency brake, shut the vehicle off and remove the keys from the ignition. Lift the front of the car using your preferred method. A lift, jack/jack stands, or ramps will work.

2 – Open the hood.


3 – Using a ratchet, extension, & 10 mm socket, remove the 6 bolts circled below in green.

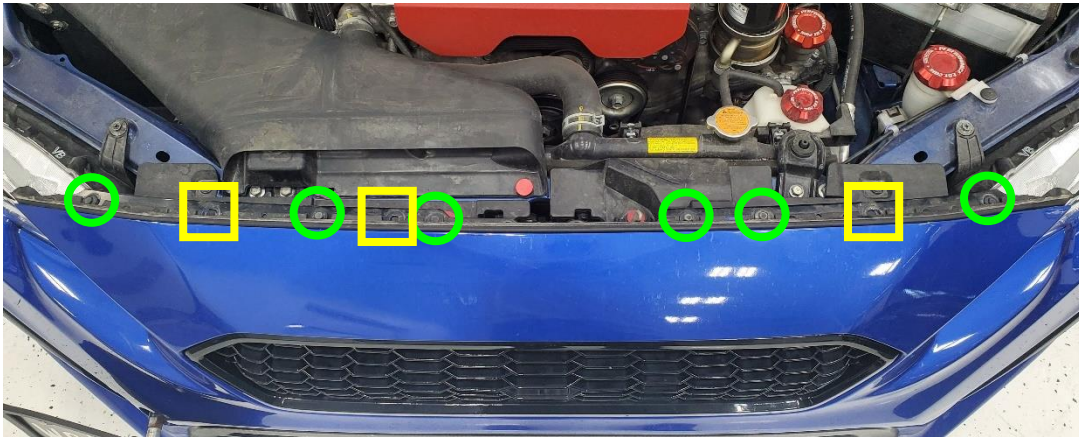


4 – Using a flat head screwdriver, remove the three plastic pop-clips, boxed above in yellow.

5 – With those fasteners removed, the upper bumper retaining bracket and attached weather stripping is free to remove, set it aside for reinstallation later.

6 – Now, under the front of your vehicle, you'll need to remove 9 plastic pop-clips. Three are located in the center portion of the bumper and tie to the engine splash shield, shown in **Figure 1**. Then 3 more near each wheel well, shown in **Figures 2**.

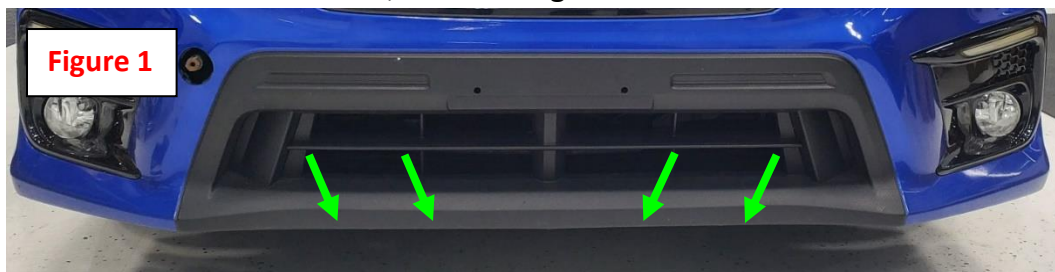

7 – Next, there are 2 fasteners in each wheel well. The one circled in red is released by pressing the center pin in, and then removing the fastener. The other, circled in yellow, can be removed with a flat head screwdriver. Repeat on the opposite side.

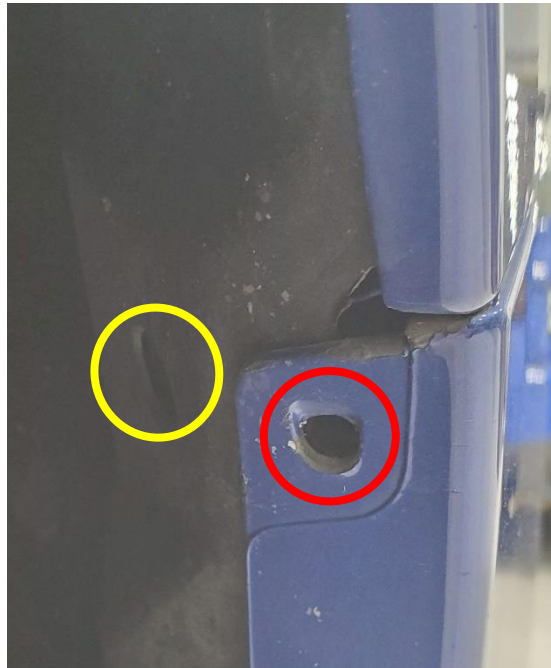


8 – The bumper is now free to be removed. Grab where indicated in the below photo and pull outward on the bumper to free it from the clips. Repeat on the opposite side. Then with both sides free, you should be able to grab from the center of the bumper and remove it from the car.




Note: If your car is currently equipped with fog lights and/or turn signals located in the lower bezels of the bumper, these bezels will not support those lights. Take care not to strain the wiring when removing the bumper and secure any loose harnesses properly.

9 – With the bumper off the car, depress the plastic tabs along the edges of the bezels and press from the backside to pop it free from the bumper. Repeat on the opposite side.

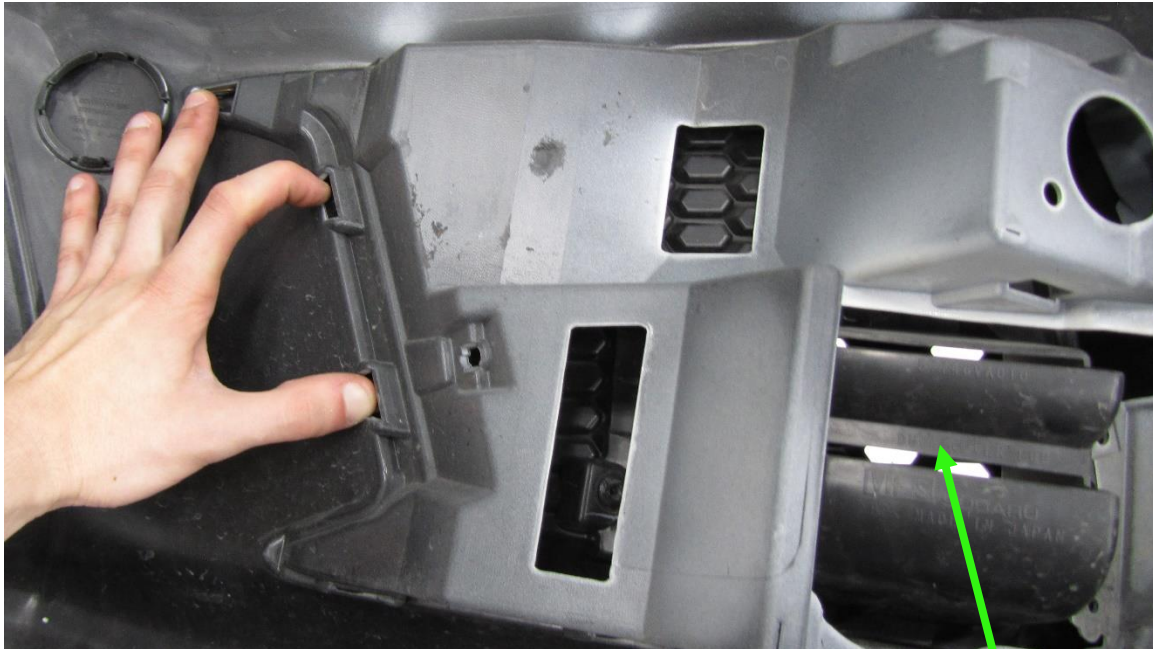

Press outward as you free the tabs around the edges of the bezel

10 – Take the OLM fog delete and align the outer tabs with the slots shown in **Figure 3 & 4**.

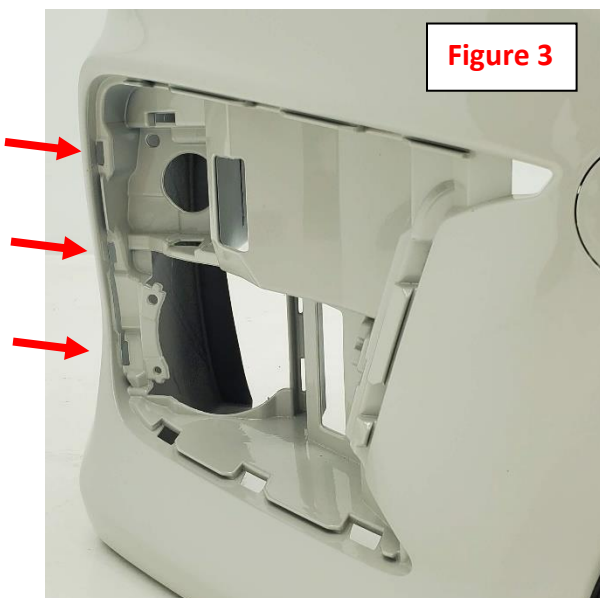

11 – Now, press the fog delete into the slots on the bumper, helping to guide the tabs in from the back side of the bumper.



12 – With the fog delete seated, press firmly along the front of the bezels to snap the front 2 corners into the bumper.



13 – Repeat steps 9 - 12 on the opposite side of the bumper for a complete install.

14 – Follow steps 2 – 8 in reverse order to reinstall your front bumper

15 - Your install is now complete! Enjoy your new OLM Fog Deletes!

Revision Table