



Rev1.0


### OLM Carbon Fiber Hood Struts

Part #: OLMA.70262.1

Application: 2022+ BRZ / GR86

#### Parts List:

- ① OLM Carbon Fiber Hood Struts – x2
- ② Hood/Fender Brackets
- ③ Grease Kit

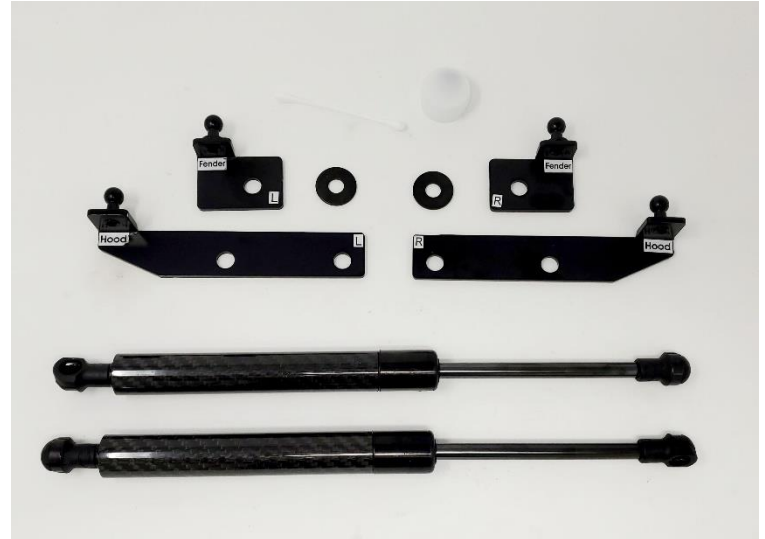

#### Required Tools:

12mm socket or wrench

Flathead screwdriver (*For removal only*)

#### Installation Instructions:

- 1 – Open your hood
- 2 – Next, open your OLM hood struts. Remove the foam piece from the carbon fiber strut body, by pulling it off over the ends of the strut.



3 – On the other end of the struts, unscrew the strut ends by twisting counterclockwise and then slide the other foam block off the end. Replace the strut ends but screwing them back onto the strut rod.



4 – Locate the install brackets and orient to the vehicle in the shown position. You will need a 12mm socket to remove the hood hinge bolts and reuse to install the hood bracket. Install the fender bracket as shown. (included washer optional)

***Brackets marked L = driver side***

***Brackets marked R = passenger side***



5 – Use the included grease kit to lubricate the mounting posts where the struts will pivot. This will allow for smooth opening and closing.

6 – Start by attaching the strut to the fender bracket first by pressing firmly towards the vehicle body. Next, you may attach the strut to the hood bracket as shown below.



7 – Enjoy your new OLM carbon wrapped hood struts!

# Revision Chart

9/13/2022 - Creation